

## INSTRUCTIONS FOR USE - COFFEE MAKER

Dear Customer,

It is important to follow the directions for use because Lagostina's guarantee hinges upon them. By following these instructions, you will also obtain the best performance from your product. Please keep these directions for use and maintenance for reference. The statements in this document do not prejudice your statutory rights.


### WARNING

Before using the coffee maker wash it with water and detergent, rinsing it thoroughly. Make at least 3 cups of trial coffee using also the "dregs".

Fill the boiler (1) with cold water to the lower rim of the safety valve (5). With the funnel-shaped filter (2) inserted into the boiler fill the chamber with ground moka coffee to the rim without pressing it. Remove any coffee residue on the rims of the boiler. Screw the upper part (6) tightly on the boiler, without exaggerating, taking care not to put pressure on the handle. Place the moka pot over the heat. If you use a flame be careful that it does not project from the rim of the bottom of the boiler. Once brewed (the upper part is full of coffee) take the moka pot from the heat and pour the coffee into cups.

Regularly check the gasket (3) and the coffee collector. If damaged or worn out replace with original spare parts. Regularly check the filter plate (4) by verifying that the holes are not blocked. If the holes are blocked, release them with a pin or replace the filter plate with original spare parts.

DO NOT WASH IN DISHWASHER.

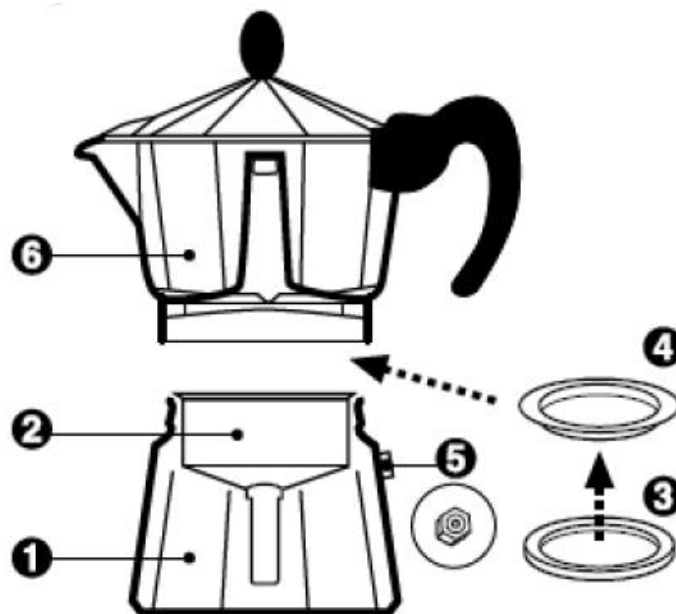

### GUARANTEE

The coffee maker is guaranteed in accordance with relevant legislation starting from the purchase date as shown on the receipt. The guarantee is valid against every manufacturing defect and it does not cover improper uses, hits or falls.